Split Block Mini Mount
Installation Instructions

-To be installed prior to siding-

Step 1
Remove the Trim Ring from the Split Block. Fasten the bottom of the Split Block in the desired location. See Figure 1 at right.

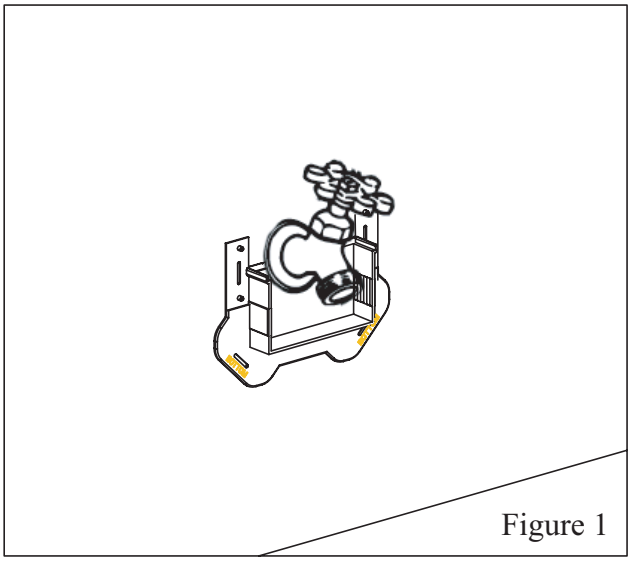
Figure 1

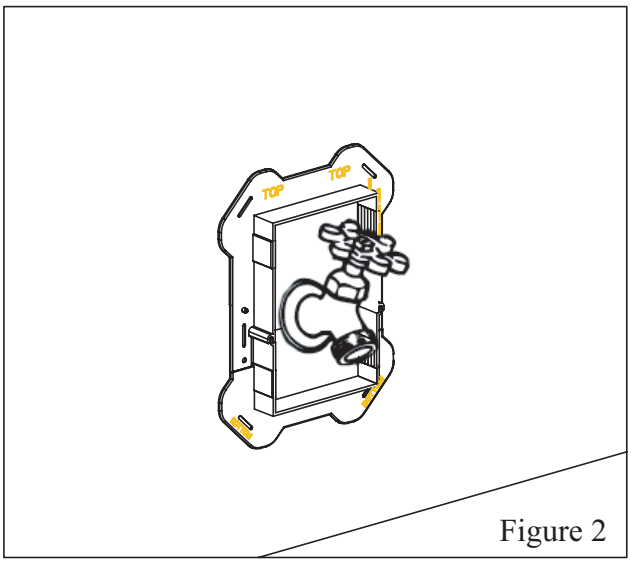

Figure 2

Step 2
Reassemble the top to the bottom and fasten it into place. See Figure 2 at left.

Step 3
Cut the siding around the Split Block. Install the siding according to the manufacturer's installation instructions. See Figure 3 at right.

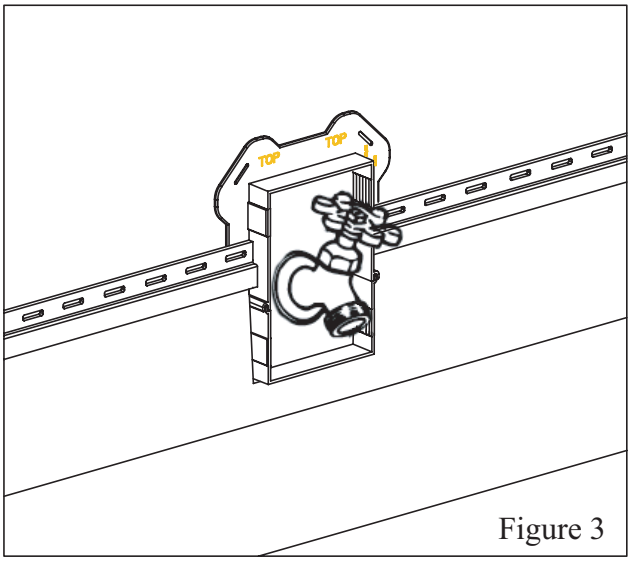

Figure 3

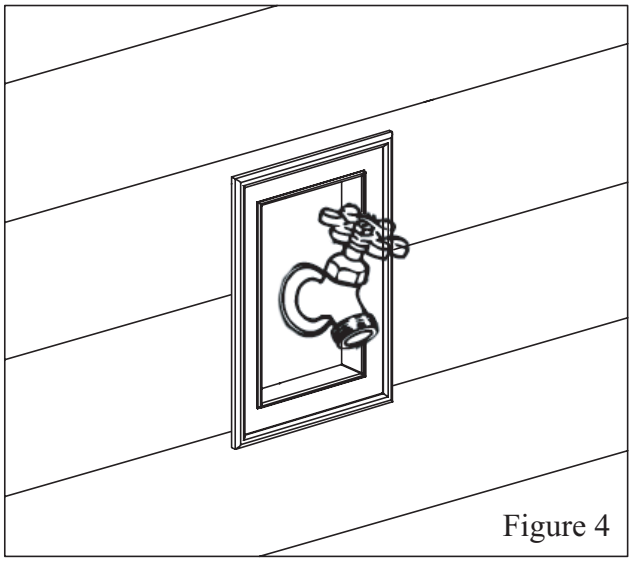
Figure 4

Step 4
Install the Trim Ring by locking it into place. It may be necessary to cut the ring along the v-groove on the back of the part to prevent interference. See Figure 4 at left.

I-0065
PAPC9403
6-20-01